


Your TiVo Remote

- 1 The **TIVO BUTTON** takes you to the Home screen.
- 2 If programmed, **TV PWR** turns your TV on or off. Go to 'Menu' > 'Settings' > 'Remote, CableCARD, & Devices' > 'Remote Control Setup' to program.
- 3 If programmed, use **INPUT** to select the input for your TV.
- 4 **BACK** goes back to the previous screen.
- 5 Use the **ARROW BUTTONS** to navigate the TiVo menus. In live TV, press **UP** for the one-line guide, **DOWN** to see personalized predictions, **LEFT** for your favorite channels, and **RIGHT** to see what's on other tuners.
- 6 If programmed, **VOLUME** and **MUTE** control the volume on your TV or AV receiver.
- 7 Press and hold the **VOICE** button to issue voice commands.
- 8 **REPLAY** repeats the last eight seconds of the show. Press and hold to jump to the beginning of a show. When browsing, press to jump to the first item in a strip.
- 9 Use the **THUMBS UP** and **THUMBS DOWN** buttons to rate shows to influence which shows get recorded as TiVo Suggestions.
- 10 The **A, B, C** buttons set options and sort and filter views, and to turn accessibility features on or off. Press and hold A for the screen reader, B for closed captioning, or C for video description.
- 11 **CLEAR** dismisses items appearing over live TV and deletes titles from My Shows and the To Do List.
- 12 **LIVE TV** takes you to live TV and lets you cycle through tuners.
- 13 **INFO** shows the info card while watching a show; press this button again to make it disappear.
- 14 Press **OK** to choose menu items.
- 15 Use **EXIT** to close certain apps.
- 16 Use **CHANNEL UP/DOWN** to change the channel or move quickly through lists and the guide.
- 17 **GUIDE** takes you to the on-screen program guide.
- 18 Press **RECORD** to record the show you're watching, or to set up a recording for a show selected in the guide.
- 19 While watching shows, use these buttons to control playback. Press up to three times for three speeds. In the TiVo menus, use **REWIND** and **FAST-FORWARD** to move quickly through strips. Press **PLAY** and then **OK** to start/stop QuickMode".

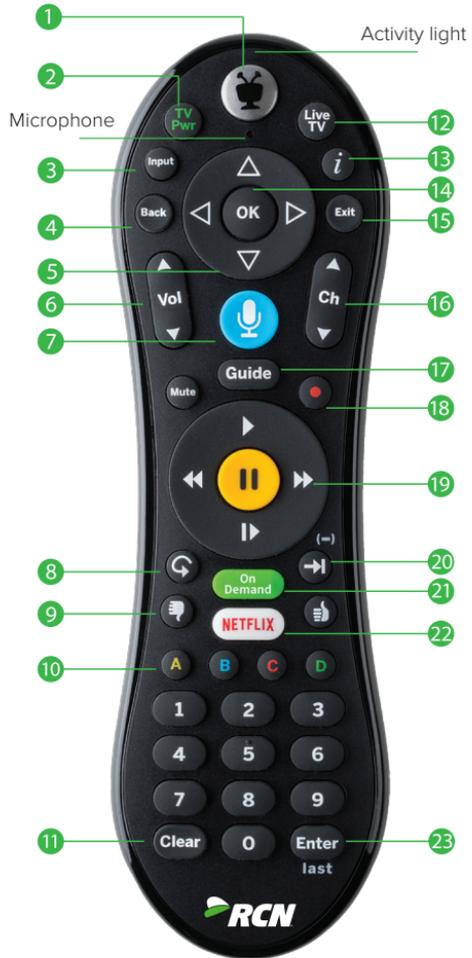

- 20 **ADVANCE** moves forward in 30-second increments; press and hold to jump to the end of the show. Or, press to jump to the next tick mark when fast-forwarding or rewinding. Use to enter a dash when tuning to OTA sub-channels.
- 21 Press **ON DEMAND** to go directly to the video on demand library.
- 22 Press the **NETFLIX** button to launch the Netflix app.
- 23 **ENTER/LAST** returns to the last channel viewed.

* To program your TiVo remote, press the TiVo button to go to the Home screen and select the Menu icon . Then choose 'Settings' > 'Remote, CableCARD, & Devices' > 'Remote Control Setup.' Follow the easy on-screen instructions.